



Cotton Candy Machine Instructions

Place the machine on a sturdy, level surface. Something lower than dining table height works best, as bowl may be difficult to reach when assembled. Loosen the travel knobs on either side of the spinner head to ensure proper rotation of the spinner head. Make sure all switches on machine are in "OFF" position. Plug the machine into a grounded outlet. *Extension cords cannot be used with this machine.*

Place the bowl over the spinner head, then unroll the plastic screen along the outside rim of the bowl and hold it in place with the metal clips. This screen causes the floss to collect in the bowl properly. After the screen is in place, lower the clear bubble over the bowl to prevent floss from flying away.

After the machine is plugged into the proper outlet, fill the spinner head halfway with floss sugar. Lower the lid on the clear bubble, then turn the motor switch into the "ON" position. This will start the spinner head. Some sugar may fly out of the spinner head at this time, so make sure to keep your eyes away from level with the head if the clear lid is open.

Turn the heat switch to "ON" and the voltage control knob to its highest setting. This will start cotton candy flowing in just a few seconds. After cotton candy is flowing out of the head, turn the voltage knob down until the meter needle hovers in the green zone. This zone should keep the sugar flowing without burning it.

The leather "floaters" on the sides of the spinner head create a draft of air that controls where the floss flies in the bowl. Twisting these up or down will cause the candy to fly higher or lower in the bowl.

Continue refilling the spinner head until desired amount of floss is made, then run the spinner head until no more floss is produced. Turn both switches to "OFF", then unplug the machine from the outlet.

Cleaning

Clean only the bowl, plastic mesh, and clear bubble before returning machine to the store. Please do not clean any part of the spinner head or base unit.

322 Thain Rd
Lewiston, Id 83501
208-746-4246

222 N. Main St.
Moscow, Id 83843
208-882-4246