

# *Gone Fishin*

## Safety Instructions

1. Be sure that there is plenty of clearance between the player and spectators.
2. Keep spectators clear from the sides and back of canvas to prevent them from being struck by a deflected or errant throw.
3. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.
4. NEVER USE THE GAME IN STRONG WINDS OR LIGHTENING!
5. Use caution when setting up or taking down the game. The sections of tubing can come apart and fall down causing injury.
6. Use only the game accessories included with the game.

# *Gone Fishin*

## Packing List

<u>Description</u>	<u>Quantity</u>
Back Canvas, 7' x 7'	1
Front Canvas, 42" x 7'	1
"Four-Way" Fittings	2
"Elbow" Fittings	4
"Tee" Fitting	2
"Three-Way" Fittings	2
Lengths of Tubing 44.5" ( <i>Swedged</i> )	5
Lengths of Tubing 41.5" ( <i>Unswedged</i> )	7
Lengths of Tubing 36" ( <i>With rubber tips</i> )	2
Lengths of Tubing 24"	4
Stakes	4
Fishing Pole with magnet	1
Magnetic Fish	12
Carrying Case	1



TWISTERDISPLAY  
 P.O. BOX 2704  
 EASTLIVERPOOL, OH 43920  
 PHONE (330) 386-1270 FAX (330) 386-0418  
 ORDERDESK: (800) 637-3656  
 EMAIL [sales@twisterdisplay.com](mailto:sales@twisterdisplay.com)

# Gone Fishin

## Assembly Instructions

1. Select a level area to operate game with plenty of room to allow for a line to form.
2. Assemble the framework, per photo. Note that the eight longer pieces of tubing are used to form the frame for the back canvas (2 per side). Slide a “Tee” Fitting onto each side of the back canvas frame. These fittings join the back frame to the front. Insert the 24” lengths of pipe into the ends of each “Tee” Fitting and the ends of the 4-Way Fittings on the bottom of the frame. Complete the frame by sliding the last two pieces of swedged and unswedged pipe together and connect between the 3-way fittings, as shown.
3. Place the two shorter rubber-tipped pieces into the 4-Way fittings at the back of the game. These create the base. (Be sure to tighten down the fittings using the small bolts on them.)
4. Attach canvas to the framework using the Velcro straps. The top of the 7x7 back canvas will attach to the top of the frame, while the bottom of the canvas will attach to the front, forming a type of hammock to hold the fish. The smaller front panel attaches to the front of the game. The canvas should also attach along the side poles. (See photo)
5. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.
6. Never fold up canvas wet. Always allow to dry thoroughly first.  
[NOTE: Your canvas may be powdered to prevent it from sticking together during shipment. Simply remove powder with a dry cloth.]

---

### CANVAS CARE

1. If game becomes wet, dry thoroughly before storing.
2. Fold the canvas INWARD to help protect and keep it clean.
3. Canvas can be cleaned with rubbing alcohol when necessary. If your game involves velcro, clean the hook and loop fabric with dry brush to knock out the dirt. If velcro fabric is badly soiled, use upholstery cleaner.

## FRAME SET-UP

