



Popcorn Machine Instructions

- Connect popcorn machine to a properly grounded outlet
- Turn on the POWER switch
 - The light will come on in the cabinet and the bottom warmer will turn on to keep popped corn fresh
- Turn on the KETTLE/MOTOR switch and wait about 5 minutes
- Empty contents of one popcorn mix pack into kettle
- While corn is popping leave one door slightly open to keep glass from fogging. Leave hopper door in the out position to help catch stray popped corn.
- Allow corn to pop until there is a 2 or 3 second gap between pops. Turn off kettle at this point to prevent burned kernels. Dump corn inside kettle by rotating handle clockwise.
- Repeat steps for additional batches of corn.
***Always keep MOTOR/KETTLE switches off when machine is not popping corn.

Cleaning

All grease, butter, and kernels need to be cleaned off of the glass sides, doors, bottom tray, and base interior of the machine before returning to Hahn Rentals.

DO NOT CLEAN ANY PART OF THE KETTLE! This can ruin the popcorn machine.

Failure to clean the machine before return will result in a cleaning charge.

Serving Sizes

Each pack of popcorn mix will fill roughly 8 of the popcorn bags that Hahn Event Rentals sells. This portion is sufficient to feed an adult, so if smaller portions are desired you can fill the bags halfway or use smaller packages.